



Original	Rechange	Original	Rechange
 Modo de espera	 Shift + Sleep / Timer	 Borrar	 Shift + Back / Return
 Ecuilizador	 Shift + Audio / Lang I/II	 0/10	 0
 Surround	 Shift + Eject / Surround	 10+	 Guide / EPG / -/-
 Abrir/Cerrar	 Eject / Surround	 Titulo	 Text / Goto
 Audio	 Audio / Lang I/II	 Up	 Up
 1	 1	 Menu	 Menu / Home
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 Angulo	 Shift + Picture / Format	 Right	 Right
 4	 4	 Programa	 TV/Radio /
 5	 5	 Down	 Down
 6	 6	 Pantalla	 Picture / Format
 Subtitulo	 Subtitle / EQ	 PAL/NTSC	 Sound / Title
 7	 7	 Configuracion	 Setup / OPT /
 8	 8	 Extracto	 Shift + TV/Radio / Program
 9	 9	 Vol+	 Vol+
 Busqueda	 Red / Netflix / Search	 Silencio	 Mute / Dimmer

Original	Rechange	Original	Rechange
 Borrar	 Shift + Back / Return	 0/10	 0
 Surround	 Shift + Eject / Surround	 Titulo	 Text / Goto
 Abrir/Cerrar	 Eject / Surround	 Up	 Up
 Audio	 Audio / Lang I/II	 Menu	 Menu / Home
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 Angulo	 Shift + Picture / Format	 Programa	 TV/Radio /
 4	 4	 Down	 Down
5	5	Pantalla	Picture / Format
6	6	PAL/NTSC	Sound / Title
7	7	Configuracion	Setup / OPT /
8	8	Extracto	Shift + TV/Radio / Program
9	9	Vol+	Vol+
Busqueda	Red / Netflix / Search	Silencio	Mute / Dimmer





Original	Recharge	Original	Recharge
Marcador	Smart / List		
Zoom	Zoom / Size		
Vol-	Vol-		
A-B	Yellow / YouTube / Repeat		
Repeticion	Back / Return		
Lento	Sleep / Timer		
<<	<< / Tune-		
>>	>> / Tune+		
I<<	I<< / Preset-		
>>I	>>I / Preset+		
Parada	Stop / Hold		
Pausa/Fotog	Pause / Step / Freeze		
Reproducción	Play / Slow		

