




 




 



















 



 



 
 

 




 
 



 


 
 

 




 
 



 





 











 



 

 










Original		Rechange		Original		Rechange	
	Power		Power		5		5
	Language		Dual		6		6
	Menu		Menu		7		7
	Open/Close		Eject		8		8
	Goto		Green		9		9
	Angle		Red		10/0		0
	Prog		Sleep		10+		Guide
	PBC		Yellow		USB		AV
	N/P		Blue		Repeat		Text
	RL		3D		A-B		D. Menu
	Clear		Exit		Title		Smart
	Step		TV/R		Return		Back
	V-Mode		Format		OSD		Info
	1		1		Slow		List
	2		2		Zoom		Shift + Eject
	3		3		Setup		Options
	4		4		Subt		Subt





Original	Rechange	Original	Rechange
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Pause		Pause
	Mute		Mute
	Stop		Stop
	<<		<<
	>>		>>
	Play		Play
	I<<		I<<
	>>I		>>I
	Vol+		Vol +
	Vol-		Vol -

