






 

















 














 





 



 




	Original	Recharge		Original	Recharge
	Power		Power		Left
	Source		AV		Ok
	1		1		Right
	2		2		Down
	3		3		Open / TV/Radio
	4		4		Open / TV/Radio
	5		5		Exit / Title
	6		6		EPG / D.Menu
	7		7		EPG / D.Menu
	8		8		Red / Goto
	9		9		Green / Angle
	0		0		Yellow / Repeat
	-/--		Shift + Guide		Blue / A-B
	Recall		Back		Vol +
	Media		Media		Vol -
	Menu		Menu		Display
	Up		Up		Mute



