 

 






 

 







 
 


 


 


 











 
 











	Original	Rechange	Original	Rechange
	Power			Pause
	Info			Stop
	Zoom			Return
	DVD/USB/SD/DV			I<</FAV-PR
	Title			>>I
	Menu			<</Guide
	Setup			>>/EPG
	CH+			1
	CH-			2
	Up			3
	Down			4
	Right			5
	Left			6
	Enter			7
	A-B/Language			8
	Rep/PR List			9
	Play			0



