

 



 



 


 

 

 
 
 





 



 

















 

 

 

 





 

 












Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol +
	Mute		Mute		Vol-		Vol -
	Sleep		Sleep		Left		Left
	Nicam/A2		Dual		Enter		Ok
	Still		Pause		1		1
	16:9		Format		2		2
	NR.		Options		3		3
	Surround		List		4		4
	Picture	 + 	Shift + Format		5		5
	Tv/Av		AV		6		6
	Display		Info		7		7
	Sound	 + 	Shift + Dual		8		8
	Up		Up		9		9
	CH+		Ch +		0		0
	CH-		Ch -		-/--		Guide
	Down		Down		Recall		Pre Ch
	Right		Right		Red		Red





	Original	Rechange		Original	Rechange
	Green		Green		
	Yellow		Yellow		
	Cyan		Blue		
	Index		D. Menu		
	Cancel		Exit		
	Subpage		Subt		
	Size		Eject		
	Hold		Stop		
	Reveal		Menu		
	PIP Window		Shift + Media		
	PIP Position		Shift + Smart		
	PIP Swap		Smart		
	TXT/CC		Text		
	PIP Size		Media		
	PIP On/Off		Shift + Power		

	Original	Rechange

