













 







 





 










	Original	Rechange	Original	Rechange
	Power			Left
	Sleep			Vol-
	Mute			
	Time			
	Alarm			
	Source			
	I<<			
	Play			
	Pause			
	>>I			
	Mem			
	Mem+			
	Mem-			
	Treble+			
	Bass+			
	Vol+			
	Treble-	