
 
 


 




 
 





 
 
 


 

 

 
 
 
 


 
 
 
 


 
 





 

 
 



 



 








 





 
| Original     | Recharge  | Original   | Recharge  |
|--------------|---|------------|---|
| On/Off       |  Power   | OK Enter   |  Ok      |
| Audio Off    |  Mute  | Menu Right |  Right   |
| Slow Down    |  Ch -  | Return     |  Back    |
| Stop         |  Stop  | Menu Down  |  Down    |
| Pause        |  Pause   | Volume+    |  Vol +   |
| Auto/Track   |  Red   | Progr.     |  Sleep   |
| Slow Up      |  Ch +  | Next       |  >>      |
| Subt.        |  Subt  | Volume-    |  Vol -   |
| Rep/A-B      |  +  Shift + Text      | Top Menu   |  D. Menu |
| Title        |  List  | Prev.      |   <<     |
| DVD/TV       |  Media  | 1          |  1      |
| Repeat/1/All |  Text  | 2          |  2     |
| Zoom         |  +  Shift + Eject | 3          |  3     |
| Menu         |  Menu  | 4          |  4     |
| Menu Up      |  Up  | 5          |  5     |
| Display      |  +  Shift + Info  | 6          |  6     |
| Menu Left    |  Left  | 7          |  7     |




 
 


 

 
 






 


 

 



 


 




 



| Original     | Recharge  |                |
|--------------|---|----------------|
| 8            |    | 8              |
| 9            |    | 9              |
| Store        |    | Green          |
| Digest       |    | Yellow         |
| Random       |  +      | Shift + Format |
| Play         |    | Play           |
| Game         |    | Blue           |
| +10          |    | Guide          |
| Np           |  +      | Shift + List   |
| Remain       |    | Exit           |
| Karaoke/Step |  +    | Shift + >>     |
| Shuffle      |  +  | Shift + TV/R   |
| 0            |    | 0              |
| C/CH         |    | Pre Ch         |
| Record       |    | Rec            |
| Video        |    | Options        |
| Rewind       |    | <<             |

| Original     | Recharge  |               |
|--------------|---|---------------|
| ON/Off       |  +      | Shift + Power |
| Mode         |    | Smart         |
| Key-         |  +      | Shift + Left  |
| Input Source |    | AV            |
| 3D           |    | 3D            |
| F.Forward    |    | >>            |
| Play/Back    |  +      | Shift + Play  |
| Timer        |  +      | Shift + AV    |
| Open/Close   |    | Eject         |
| Resume       |  +      | Shift + Pause |
| Audio        |  +    | Shift + Dual  |
| Key+         |  +  | Shift + Right |
| Vocal/Assist |  +  | Shift + Vol + |
| Search       |    | TV/R          |
| Tone         |  +  | Shift + Vol - |
| Info         |    | Info          |
| Angle        |    | Format        |



| Original | Recharge   | Original | Recharge |
|----------|--|----------|----------|
| Lang     |  Dual |          |          |
|          |  |          |          |
|          |  |          |          |
|          |  |          |          |
|          |  |          |          |
|          |  |          |          |
|          |  |          |          |
|          |  |          |          |
|          |  |          |          |
|          |  |          |          |
|          |  |          |          |
|          |  |          |          |
|          |  |          |          |
|          |  |          |          |
|          |  |          |          |
|          |  |          |          |
|          |  |          |          |
|          |  |          |          |
|          |  |          |          |
|          |  |          |          |



| Original     | Rechange   | Original   | Rechange  |
|--------------|--|------------|---|
| On/Off       |  Power  | OK Enter   |  Ok      |
| Audio Off    |  Mute   | Menu Right |  Right   |
| Slow Down    |  Ch -   | Progr.     |  Sleep   |
| Subt.        |  Subt   | Return     |  Back    |
| Auto/Track   |  Red  | Menu Down  |  Down    |
| Slow Up      |  Ch +   | Top Menu   |  D. Menu |
| Rep/A-B      |  +  Shift + Text     | Volume+    |  Vol +   |
| Title        |  List   | Volume-    |  Vol -   |
| Stop         |  Stop   | 1          |  1       |
| Pause        |  Pause  | 2          |  2       |
| Repeat/1/All |  Text  | Next       |  >>     |
| Zoom         |  Eject  | 3          |  3     |
| DVD/TV       |  AV   | 4          |  4     |
| Menu         |  Menu   | Prev.      |   <<   |
| Menu Up      |  Up   | 5          |  5     |
| Display      |  +  Shift + Info | 6          |  6     |
| Menu Left    |  Left   | 7          |  7     |



| Original    | Recharge  | Original       | Recharge |
|-------------|---|----------------|----------|
| Rewind      |      | <<             |          |
| Play        |      | Play           |          |
| Record      |      | Rec            |          |
| Np          |      | Green          |          |
| Angle       |      | Format         |          |
| Video       |      | Smart          |          |
| Remain      |      | Blue           |          |
| Pbc         |      | Yellow         |          |
| Syst.Preset |      | Media          |          |
| F.Forward   |      | >>             |          |
| Setup       |      | Options        |          |
| Timer       |    | Shift + AV     |          |
| 3D          |    | 3D             |          |
| Play/Back   |    | Shift + Play   |          |
| Shuffle     |    | Shift + TV/R   |          |
| Lang        |    | Dual           |          |
| Random      |    | Shift + Format |          |
| 8           |    | 8              |          |
| Audio       |    | Shift + Dual   |          |
| Info        |    | Info           |          |
| 9           |    | 9              |          |
| +10         |    | Guide          |          |
| 0           |    | 0              |          |
| C/CH        |    | Pre Ch         |          |
| ON/Off      |    | Shift + Power  |          |
| Key-        |    | Shift + Left   |          |
| Auto Scan   |    | Shift + Ok     |          |
| Key+        |    | Shift + Right  |          |
| Echo+       |  | Shift + Ch +   |          |
| Echo-       |  | Shift + Ch -   |          |
| Digest      |  | Shift + Guide  |          |

