






 











 











Original	Recharge
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
FAV	Fav / Marker / PC
0	0
Recall	Back / Return
P.Mode	Picture / Format
S.Mode	Sound / Title
Audio	Audio / Lang I/II

Original	Recharge
Menu	Menu / Home
Info	Info / Angle
Up	Up
Left	Left
OK	OK
Right	Right
Source	AV / Input / RDS
Down	Down
Exit	Exit / Cancel / Clear
Vol+	Vol+
Home	Shift + Menu /
CH+	CH+ / Page+
Vol-	Vol-
Mouse	Smart / List
CH-	CH- / Page-
EPG	Guide / EPG / -/-
Aspect	Shift + Picture / Format





Original	Rechange
 Sleep	 Sleep / Timer
 Rec	 Rec / Rec Mode
 Tv/Radio	 TV/Radio /
 Freeze	 Shift + Pause / Step /
 Sub-T	 Subtitle / EQ
 Rec.List	 Shift + Rec / Rec Mode
 Angle	 Shift + Info / Angle
 TTX	 Text / Goto
 Hold	 Shift + Stop /
 Reveal	 Shift + Back / Return
 Sub-P	 Setup / OPT /
 Eject/Index	 Eject / Surround
 Zoom	 Zoom / Size
 Play	 Play / Slow
 Pause/TSR	 Pause / Step / Freeze
 Stop/Auto	 Stop / Hold
 <<	 << / Tune-

Original	Rechange
 >>	 >> / Tune+
 <<	 << / Preset-
 >>	 >> / Preset+
 Red/D.Setup	 Red / Netflix / Search
 Green/D.Menu	 Green / APP / Repeat
 Yellow/D.Title	 Yellow / YouTube / Repeat
 Blue/Repeat	 Blue / Prime Video / Random

