



Original		Rechange		Original		Rechange	
	Power		Power		4		4
	Mute		Mute / Dimmer		5		5
	Play		Play / Slow		6		6
	Pause/[≡]		Pause / Step / Freeze		7		7
	Stop/[≡+]		Stop / Hold		8		8
	Rec/[≡◆]		Rec / Rec Mode		9		9
	<</[≡o]		<< / Tune-		*		Setup / OPT /
	<</[≡i]		<< / Preset-		0		0
	>> /[≡?]		>> / Preset+		Up		Up
	>> /[≡x]		>> / Tune+		[→]		AV / Input / RDS
	Info		Info / Angle		Left		Left
	OI/II/Audio		Audio / Lang I/II		OK		OK
	[≡]		Text / Goto		Right		Right
	←/<x]		Fav / Marker / PC		Down		Down
	1		1		Netflix	+	Shift + Red / Netflix /
	2		2		You Tube	+	Shift + Yellow / YouTube /
	3		3		Vol+		Vol+





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause [/≡]	 Pause / Step / Freeze
 Stop/[≡+]	 Stop / Hold
 Rec/[≡◆]	 Rec / Rec Mode
 <</[≡o]	 << / Tune-
 <</[≡i]	 << / Preset-
 >> /[≡?]	 >> / Preset+
 >>/[≡x]	 >> / Tune+
 Info	 Info / Angle
 O) /II/Audio	 Audio / Lang I/II
 [≡]	 Text / Goto
 ←/<x]	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3

Original	Rechange
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 *	 Setup / OPT /
 0	 0
 [→]	 AV / Input / RDS
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 +	 Vol+



