







 
 

 

 












 


 







 


 

 
 













 



 
 


 






Original	Recharge	Original	Recharge
	Power		Power
	Info		Info
	Setup		Options
	Mute		Mute
	Menu		Menu
	Music		Media
	Copy		Exit
	Zoom		Eject
	Tv System		TV/R
	Source		AV
	Vol-		Vol -
	Vol+		Vol +
	Home		Smart
	Return/X		Back
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Time Shift		Ch +
	Goto		Ch -
	Rec		Rec
	Play		Play
	Stop		Stop



