
 
 

 




 
 


 
 

 
 



 

 
 



 

 
 
 




	Original	Rechange		Original	Rechange
	Power		Power		9
	Mute		Mute		0
	TV/TXT		Text		Shift + Guide
	TV/AV		AV		Return
	FAV		Pre Ch		Vol +
	Picture		Format		Vol -
	Sound		Dual		Ok
	Sleep		Sleep		Up
	Hold		Media		Down
	1		1		Right
	2		2		Left
	3		3		Ch +
	4		4		Ch -
	5		5		Tv Menu
	6		6		Exit
	7		7		Tv/Radio
	8		8		Info





	Original	Rechange	Original	Rechange
	Subtitle	 Subt		
	Audio	 D. Menu		
	EPG	 Guide		
	CH List	 List		
	Play/Pause	 Play		
	Screen	 Eject		
	Stop	 Stop		
	Record	 Rec		
	<<	 <<		
	>>	 >>		
	I<</Size	 I<<		
	>>I/Subpage	 >>I		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Blue	 Blue		

