



Original		Recharge		Original		Recharge	
	Power		Power		2		2
	OK		Ok		3		3
	Up		Up		4		4
	Down		Down		5		5
	Right		Right		6		6
	Left		Left		7		7
	Mute		Mute		8		8
	Sleep		Sleep		9		9
	Tv/AV		AV		0		0
	Display		Shift + Info		-/--		Shift + Guide
	Tv-Exit		Exit		Recall		Pre Ch
	Tv-Menu		Menu		Language		Dual
	Vol+		Vol +		Zoom		Shift + Eject
	Vol-		Vol -		DVD-Setup		Media
	CH+		Ch +		Menu		D. Menu
	CH-		Ch -		Subtitle		Subt
	1		1		Program		Shift + Sleep





Original	Recharge
ANGLE	Angle
TITLE	Title
GOTO	Goto
SLOW	Slow
REPEAT	Repeat
A-B	A-B
PICTURE	Picture
SOUND	Sound
NICAM/A2	Nicam/A2
	Open/Close
EXIT	Exit
PROG-	Prog-
	Play
PROG+	Prog+
	Pause
	Stop
TV FORMAT TV/TXT	TV/TXT/Tv Format

Original	Recharge
TEXT CANCEL	Cancel/Text
INFO REVEAL	Reveal/Info
LANGUAGE HOLD	Hold/Language
FAV SIZE	Size/FAV
EPG SUBPAGE	Subpage/EPG
INDEX	Index
TV/RADIO	Red
TV/RADIO	<<
TV/RADIO	Tv/Radio
AUDIO	Green/Audio
AUDIO	>>
FREEZE	Yellow/Freeze
FREEZE	I<<
SUBTITLE	>>I
SUBTITLE	Blue/Subtitle
DVB-MENU	DVB Menu

