







 





 

 



 
 
 
 



 
 
 

 



 


 
 


 










 
 












 




| Original | Rechange | Original | Rechange |
|---|---|---|--|
|  Power |  Power |  Recall |  Pre Ch |
|  Mute |  Mute |  V + |  Vol + |
|  Display |  Info |  V - |  Vol - |
|  Exit |  Exit |  P + |  Ch + |
|  TV / AV |  AV |  P - |  Ch - |
|  SYS |  Smart |  Up |  Up |
|  1 |  1 |  Left |  Left |
|  2 |  2 |  Menu |  Menu |
|  3 |  3 |  Menu |  Ok |
|  4 |  4 |  Right |  Right |
|  5 |  5 |  Down |  Down |
|  6 |  6 |  SMode |  Format |
|  7 |  7 |  PMode |  Shift + Dual |
|  8 |  8 |  Sleep |  Sleep |
|  9 |  9 |  Nicam |  Dual |
|  0 |  0 |  Hold |  Stop |
|  -/-- |  Guide |  Index |  Media |



