 









 

 


 





 


 


 

 






 




 



 

 


 
 





	Original	Rechange	Original	Rechange
	Power			Left
	DTV/VCR			List
	Mute			Pre Ch
	Menu			Media
	Info			Back
	EPG			1
	Play			2
	Pause			3
	Exit			4
	OK			5
	Up			6
	CH+			7
	CH-			8
	Down			9
	Right			0
	Vol+			Tv/Radio
	Vol-			Audio
				TV/R
				Dual



