






 



 

 

 
 



 


 
 



 
 

 

 


 


 







 








 






 


 
 




Original	Rechange	Original	Rechange
 Power	 Power	 Left	 Left
 DTV/VCR	 Smart	 Rec List	 List
 Mute	 Mute	 Favorite	 Pre Ch
 Menu	 Menu	 Game	 Media
 Info	 Info	 Recall	 Back
 EPG	 Guide	 1	 1
 Play	 Play	 2	 2
 Pause	 Pause	 3	 3
 Exit	 Exit	 4	 4
 OK	 Ok	 5	 5
 Up	 Up	 6	 6
 CH+	 Ch +	 7	 7
 CH-	 Ch -	 8	 8
 Down	 Down	 9	 9
 Right	 Right	 0	 0
 Vol+	 Vol +	 Tv/Radio	 TV/R
 Vol-	 Vol -	 Audio	 Dual





Original	Rechange
 Subtitle	 Subt
 Text	 Text
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Record	 Rec
 Stop	 Stop
 <<	 <<
 >>	 >>

Original	Rechange

