



Original	Recharge
Guide	Guide / EPG / -/--
Power	Power
Eject	Eject / Surround
Tv/Radio	TV/Radio /
Red/Goto	Red / Netflix / Search
Green/Angle	Green / APP / Repeat
Yellow/Repeat	Yellow / YouTube / Repeat
Blue/A-B	Blue / Prime Video / Random
FAV	Fav / Marker / PC
Text	Text / Goto
Freeze/Hold	Shift + Pause / Step /
D.Menu	D.Menu / Top
Subtitle	Subtitle / EQ
Zoom/Size	Zoom / Size
Aspect	Shift + Picture / Format
Subpage	Info / Angle
Media	Shift + Display / Media

Original	Recharge
Play	Play / Slow
Pause	Pause / Step / Freeze
<<	<< / Tune-
>>	>> / Tune+
D.Setup	Setup / OPT /
Rec	Rec / Rec Mode
Stop	Stop / Hold
I<<	I<< / Preset-
I>>/Index	I>> / Preset+
Menu	Menu / Home
Lang/Audio	Audio / Lang I/II
Up	Up
Left	Left
OK	OK
Right	Right
Sleep	Sleep / Timer
Down	Down





Original		Rechange	
	Title/Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--

Original		Rechange	
	0		0
	Back		Back / Return
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title

