

 



 

 



 

 

 

 

 

 

 





 

 

 

 

 

 



 





 













 







Original		Rechange		Original		Rechange	
	Power		Power		CHN List		Smart / List
	Mute		Mute / Dimmer		0		0
	Picture		Picture / Format		Return / Back		Back / Return
	Sound		Sound / Title		Menu		Menu / Home
	Zoom		Zoom / Size		Up		Up
	Subtitle		Subtitle / EQ		Source		AV / Input / RDS
	EPG		Guide / EPG / -/--		Left		Left
	FAV		Fav / Marker / PC		Enter		OK
	1		1		Right		Right
	2		2		Down		Down
	3		3		Exit		Exit / Cancel / Clear
	4		4		TV / Radio		TV/Radio /
	5		5		Vol +		Vol+
	6		6		Home		D.Menu / Top
	7		7		PR +		CH+ / Page+
	8		8		Vol -		Vol-
	9		9		PR -		CH- / Page-





	Original	Rechange		Original	Rechange
	Rec	 Rec / Rec Mode		PVR List	 Display / Media
	Sleep	 Sleep / Timer		Quick	 Setup / OPT /
	Info	 Info / Angle		AD	 Eject / Surround
	Play/Pause / Index	 Play / Slow		3D	 +  Shift + 3
	Play/Pause / Index	 Pause / Step / Freeze			
	<< / Reveal	 << / Tune-			
	>> / Mix	 >> / Tune+			
	Stop / Cancel	 Stop / Hold			
	I<< / Size	 I<< / Preset-			
	>>I / Sub-Page	 >>I / Preset+			
	Red	 Red / Netflix / Search			
	Green	 Green / APP / Repeat			
	Yellow	 Yellow / YouTube / Repeat			
	Blue	 Blue / Prime Video / Random			
	I/II / Nicam	 Audio / Lang I/II			
	Text	 Text / Goto			
	Freeze / Hold	+  Shift + Stop / Hold			

Hold

