




 

 


 
 





 





 





 

 



 







 
 






 





 

 

 

 










Original		Rechange		Original		Rechange	
	Power		Power		1		1
	Mute		Mute		2		2
	Play		Play		3		3
	Pause / Mix		Pause		4		4
	Pause / Mix		Shift + Text		5		5
	Stop / Hold		Stop		6		6
	Size		Format		7		7
	<< / Timer		<<		8		8
	<< / Timer		Shift + Power		9		9
	I<< / Index		I<<		0		0
	>>I / Reveal		>>I		Settings		Options
	>> / Cancel		>>		Exit		Exit
	>> / Cancel		Shift + Exit		Up		Up
	Info		Info		Left		Left
	Audio / I/II		Dual		OK		Ok
	Text		Text		Right		Right
	Back / Del		Back		Down		Down








 
 



 

 



 

 
 
 



 

 

 
 



 
 
 

 








 



 
 
 

 
 
 

 











Original		Recharge		Original		Recharge	
	Netflix		Media				
	Vol +		Vol +				
	Vol -		Vol -				
	YouTube		Shift + Media				
	Home / Source		AV				
	Home / Source		Smart				
	P +		Ch +				
	P -		Ch -				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	EPG		Guide				
	List		List				
	Q.Menu		Menu				





Original		Recharge		Original		Recharge	
	Power		Power		Blue		Blue
	Mute		Mute		Q.Menu		D. Menu
	1		1		Back		Back
	2		2		Up		Up
	3		3		Right		Right
	4		4		Down		Down
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Menu		Menu
	8		8		EPG		Guide
	9		9		YouTube		Shift + Media
	0		0		Vol +		Vol +
	Info		Info		Vol -		Vol -
	Audio / I/II		Dual		Home / Source		AV
	Red		Red		Home / Source		Smart
	Green		Green		Text		Text
	Yellow		Yellow		P +		Ch +





	Original	Recharge	Original	Recharge
	P -	CH -		
	List	DISC NAV LIST		
	Netflix	APP MEDIA		
	Play	PLAY MODE		
	Pause			
	Stop			
	Rec	REC MODE		
	<<			
	<<			
	>>			
	>>			
	Exit	CLEAR EXIT		

