

 




 

 
 



 


 



 



 






 















 
 





 










Original	Rechange	Original	Rechange
 Power	 Power	 P+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 P-	 CH- / Page-
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 LCD Menu	 Shift + D.Menu / Top Menu
 7	 7	 Down	 Down
 8	 8	 DVB Menu	 D.Menu / Top
 9	 9	 Input	 AV / Input / RDS
 -/--	 Guide / EPG / -/--	 P.Mode	 Picture / Format
 0	 0	 S.Mode	 Sound / Title
 Recall	 Back / Return	 Sleep	 Sleep / Timer
 Vol+	 Vol+	 Info/Display	 Info / Angle
 Audio/Audio/Lang/ MTS	 Audio / Lang I/II	 Zoom/P.Ratio	 Zoom / Size
 Exit/Exit	 Exit / Cancel / Clear	 Tv/Radio	 TV/Radio /





Original	Recharge
FAV	Fav / Marker / PC
TTX	Text / Goto
Pause/Hold/Cancel	Pause / Step / Freeze
Cancel/USB/Card	Shift + Exit / Cancel / Clear
EPG/List	Shift + Guide / EPG / -/--
Stop/Index/Stop	Stop / Hold
Size	Shift + Zoom /
Play/Play	Play / Slow
Reveal/Reveal	Setup / OPT /
Subtitle/Sub.PG	Subtitle / EQ
<</FR	<< / Tune-
Red	Red / Netflix / Search
>>/FF	>> / Tune+
Green	Green / APP / Repeat
I<</Prev	I<< / Preset-
Yellow	Yellow / YouTube / Repeat
>>I/Next	>>I / Preset+

Original	Recharge
Blue	Blue / Prime Video / Random

