

 

 







 



 
 
 
 

 
 


 






Original		Recharge		Original		Recharge	
	Power		Power		Exit/TV-G		Exit
	1		1		?		Smart
	2		2		@		Media
	3		3		Menu/i		Menu
	4		4		Back		Back
	5		5		Tools		Options
	6		6		Guide		Guide
	7		7		OK		Ok
	8		8		Up		Up
	9		9		Down		Down
	0		0		Right		Right
	FAV/ZAPP		Pre Ch		Left		Left
	TXT		Text		Vol+		Vol +
	Red		Red		Vol-		Vol -
	Green		Green		PR+		Ch +
	Yellow		Yellow		PR-		Ch -
	Blue		Blue		AV		AV





	Original	Recharge	Original	Recharge
	Mute	 Mute		
	I<	 I<<		
	>I	 >>I		
	<<	 <<		
	>>	 >>		
	Rec	 Rec		
	Play	 Play		
	Pause	 Pause		
	Stop	 Stop		
	3D/Search	 Format		
	..O/Audio	 Dual		
	[...].	 Subt		
	PIP/ECO	 3D		
	My Media/CEC	 TV/R		

