
 
 
 

 








 
 

 

 
 



 

 


 




 
 




Original	Recharge	Original	Recharge
On/Off	 Power	Return	 Back
Audio Off	 Mute	OK Enter	 Ok
Slow Down	 Ch -	Progr.	 Sleep
Slow Up	 Ch +	Menu Right	 Right
Stop	 Stop	Menu Down	 Down
Subt.	 Subt	Volume+	 Vol +
Auto/Track	 +  Shift + Right	Next	 >>
Rep/A-B	 TV/R	Volume-	 Vol -
Pause	 Pause	Top Menu	 +  Shift + Menu
Title	 List	Prev.	 <<
Repeat/1/All	 Text	1	 1
Zoom	 +  Shift + Eject	2	 2
Menu	 Menu	3	 3
DVD/TV	 AV	4	 4
Menu Up	 Up	5	 5
Display	 +  Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Rechange	Original	Rechange
8	 8	Karaoke/Step	 +  Shift + Pause
9	 9	Setup	 OPT Options
+10	 GUIDE Guide	Play/Back	 +  Shift + Left
0	 0	Video	 D.MENU D. Menu
Mode	 SMART Smart	Timer	 +  AV Shift + AV
Remain	 FORMAT Format	Mark	 A Red
C/CH	 PRE-CH Pre Ch	F.Forward	 >>
Np	 +  LIST Shift + List	Open/Close	 Eject
Pbc	 +  SUBT Shift + Subt	Audio	 DUAL Dual
R/L	 +  DUAL Shift + Dual	Info	 INFO Info
Record	 Rec	Angle	 +  A Shift + Red
Rewind	 <<	3D	 3D 3D
Play	 Play	Lang	 +  B Shift + Green
Game	 Blue	Random	 +  C Shift + Yellow
Resume	 MEDIA Media	Shuffle	 +  D Shift + Blue
Digest	 Yellow		
Dimmer	 Green		

