



Original	Recharge
Power	Power
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Menu	Menu
Exit	Exit
Up / CH+	Up
Up / CH+	Ch +
Down / CH-	Down

Original	Recharge
Down / CH-	Ch -
Right / Vol+	Right
Right / Vol+	Vol +
Left / Vol-	Left
Left / Vol-	Vol -
OK / Store	Ok
P-	Shift + Ch -
P+	Shift + Ch +
EPG	Guide
Back	Back
i	Info
Subtitle	Subt
Text	Text
Aspect	Format
Picture	Shift + Format
Audio	Dual
Sleep	Sleep





Original	Rechange	Original	Rechange
 Red / TV/Radio	 Red		
 Red / TV/Radio	 TV/R		
 Green / FAV	 Green		
 Green / FAV	 Pre Ch		
 Yellow / List	 Yellow		
 Yellow / List	 List		
 Blue / +/-	 Blue		
 All CH	 Smart		
 White / ?	 Options		

