



	Original	Recharge	Original	Recharge
	Standby / On	Power	Volume-	Vol-
	Function	Setup / OPT /	Volume+	Vol+
	Display	Display / Media	Preset EQ	Subtitle / EQ
	I<<	I<< / Preset-		
	>>I	>>I / Preset+		
	Play / Pause	Pause / Step / Freeze		
	Play / Pause	Play / Slow		
	Folder Down	Down		
	Folder Up	Up		
	Stop	Stop / Hold		
	Sleep / Timer	Sleep / Timer		
	Sleep / Timer	Shift + Sleep / Timer		
	CLK-ADJ / MEM	Smart / List		
	Play Mode	Shift + Play /		
	FIND / TS	D.Menu / Top		
	DELETE / INFO	Shift + Info / Angle		
	DELETE / INFO	Info / Angle		

