 


 




 


 








 

 
 

 





 
 

 











Original	Rechange	Original	Rechange
 Power	 Power	 [=]	 REPEAT TEXT Text
 Mute	 MUTE Mute	 GUIDE	 GUIDE Guide
 V.Format	 PICTURE FORMAT Format	 EXIT	 CLEAR EXIT Exit
 Sleep	 PROG SLEEP Sleep		 Up
 FAV	 FAV PRE-CH Pre Ch		 Down
 Tv/♪	 SEARCH TV/R TV/R		 Right
 AV	 TIMER AV AV		 Left
 SAT	 APP MEDIA Media	 OK	 OK Ok
 Zoom	 ZOOM Eject		 SHIFT + Up Shift + Up
 Camera	 HOME SMART Smart		 SHIFT + Down Shift + Down
 Vol+	 + Vol +		 A Red
 Vol-	 VOL Vol -		 B Green
 CH+	 + Ch +		 C Yellow
 CH-	 CH Ch -		 D Blue
 Info	 DISPLAY INFO Info		 1 1
 Back	 RETURN BACK Back		 2 2
 Menu	 TOP MENU MENU Menu		 3 3





Original		Rechange		Original		Rechange	
	4		4		>		Dual
	5		5		> <		3D
	6		6		[]		List
	7		7		[->]		D. Menu
	8		8				
	9		9				
	0		0				
	≡>		Options				
	V		Subt				
	Play		Play				
	Stop		Stop				
	Pause		Pause				
	Rec		Rec				
	<<		<<				
	>>		>>				
	<<		<<				
	>>		>>				

