 









 

 



 

 

 

 

 

 

 



 

 





 





 

 







 

 


 







 






Original		Rechange		Original		Rechange	
	Power		Power		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Vol+		Vol+
	4		4		Vol-		Vol-
	5		5		Left		Left
	6		6		OK		OK
	7		7		Tv/Rad		TV/Radio /
	8		8		Page Up		CH+ / Page+
	9		9		Page Down		CH- / Page-
	0		0		HDMI/RES		Shift + 0
	FAV		Fav / Marker / PC		HDMI/RES		AV / Input / RDS
	Info		Info / Angle		Ratio		Picture / Format
	Menu		Menu / Home		Red		Red / Netflix / Search
	Back		Back / Return		SOS		D.Menu / Top
	EPG		Guide / EPG / -/-		SUB		Subtitle / EQ





	Original	Recharge	Original	Recharge
	Green	 Green / APP / Repeat		
	Lang.	 Audio / Lang I/II		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	TXT	 Text / Goto		
	Timer	 Sleep / Timer		
	Media	 Display / Media		
	Rec	 Rec / Rec Mode		
	USB/List	 Smart / List		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	Stop	 Stop / Hold		
	>>	 >> / Tune+		
	<<	 << / Tune-		
	>>	 >>  / Preset+		
	<<	  << / Preset-		
	Nothing	 Setup / OPT /		

