 





 

 



 



 





 

 



 

 

 

 

 

 



 

 







 



 



 

 
 
 







Original		Rechange		Original		Rechange	
	Power		Power		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Vol+		Vol+
	4		4		Vol-		Vol-
	5		5		Left		Left
	6		6		OK		OK
	7		7		Tv/Rad		TV/Radio /
	8		8		Page Up		CH+ / Page+
	9		9		Page Down		CH- / Page-
	0		0		HDMI/RES		Shift + 0
	FAV		Fav / Marker / PC		HDMI/RES		AV / Input / RDS
	Info		Info / Angle		Ratio		Picture / Format
	Menu		Menu / Home		Red		Red / Netflix / Search
	Back		Back / Return		SOS		D.Menu / Top
	EPG		Guide / EPG / ---		SUB		Subtitle / EQ





Original	Recharge	Original	Recharge
Green	Green / APP / Repeat		
Lang.	Audio / Lang I/II		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
TXT	Text / Goto		
Timer	Sleep / Timer		
Media	Display / Media		
Rec	Rec / Rec Mode		
USB/List	Smart / List		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
Stop	Stop / Hold		
>>	>> / Tune+		
<<	<< / Tune-		
>>	>>  / Preset+		
<<	<< / Preset-		
Nothing	Setup / OPT /		

