


 
 
 

 
 



 
 


 

 
 
 
 

 
 
 

 
 



 
 


 



 

 










 





 



 
 

 







 
 
 

 
 


 





 








Original		Rechange		Original		Rechange	
	Standby		Power		8		8
	Open / Close		Eject		9		9
	OSD		Blue		0		0
	Subtitle		Subt		10+		Guide
	Angle		Yellow		Goto		Pre Ch
	Language		Dual		Step		Ch +
	L / R		Red		Slow		Ch -
	N / P		Green		PBC		Media
	Video Mode		Format		Repeat		Text
	Video		AV		Program		Sleep
	1		1		A-B		Shift + Dual
	2		2		Vol +		Vol +
	3		3		Vol -		Vol -
	4		4		Setup		Options
	5		5		Setup		Menu
	6		6		Zoom		Shift + Eject
	7		7		Up		Up





Original		Rechange		Original		Rechange	
	Down		Down				
	Right		Right				
	Left		Left				
	Enter		Ok				
	Title		TV/R				
	Root		Info				
	Return		Back				
	Return		Exit				
	3D		3D				
	Mute		Mute				
	Pause		Pause				
	Play		Play				
	Stop		Stop				
	<< FR		<<				
	>> FF		>>				
	I<< Prev		I<<				
	>>I Next		>>I				

