




Original	Rechange	Original	Rechange
 Power	 Power	 ZAP	 Pre Ch
 Source	 AV	 Format	 Format
 TV	 TV/R	 Mute	 Mute
 VIDEO	 Smart	 PIP	 3D
 PC	 Media	 Text	 Text
 1	 1	 Up / P+	 Up
 2	 2	 Up / P+	 Ch +
 3	 3	 Down / P-	 Down
 4	 4	 Down / P-	 Ch -
 5	 5	 Right / Vol+	 Right
 6	 6	 Right / Vol+	 Vol +
 7	 7	 Left / Vol-	 Left
 8	 8	 Left / Vol-	 Vol -
 9	 9	 Menu	 Menu
 0	 0	 PIP Swap	 Back
 i	 Info	 Auto	 Options
 List	 List	 Sound	 Dual





Original		Rechange	
	Freeze / Hold	 + 	Shift + Stop
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Stop		Stop
	Pause		Pause
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	F1	 + 	Shift + 1
	F2	 + 	Shift + 2
	F3	 + 	Shift + 3
	F4	 + 	Shift + 4
	P-Pos	 + 	Shift + Ch +
	P-Size	 + 	Shift + Ch -

Original		Rechange	
	Clock / Mix	 + 	Shift + Text

