








 

 






Original		Rechange		Original		Rechange	
	Power		Power		V-		Vol-
	Input		AV / Input / RDS		Home		Menu / Home
	1		1		P-		CH- / Page-
	2		2		[G]		Guide / EPG / -/-
	3		3		i		Info / Angle
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Back		Back / Return
	9		9		Down		Down
	Lang		Audio / Lang I/II		Exit		Exit / Cancel / Clear
	0		0		Netflix		Shift + Red / Netflix /
	TXT		Text / Goto		YouTube		Shift + Yellow / YouTube /
	V+		Vol+		prime video		Shift + Blue / Prime
	Mute		Mute / Dimmer		Rakuten Tv		TV/Radio /
	P+		CH+ / Page+		twitch		Shift + Green / APP / Repeat





	Original	Recharge	Original	Recharge
	*1	 SETUP Setup / OPT /		
	Red	 NETFLIX SEARCH Red / Netflix / Search		
	Green	 APP REPEAT Green / APP / Repeat		
	Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat		
	Blue	 Prime Video RANDOM Blue / Prime Video / Random		
	<<	 TUNE- << / Tune-		
	Pause	 STEP-FREEZE Pause / Step / Freeze		
	>>	 TUNE+ >> / Tune+		
	Rec	 REC MODE Rec / Rec Mode		
	Play	 SLOW Play / Slow		
	Stop	 HOLD Stop / Hold		

