






 






 





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Info	 Info / Angle
 0	 0
 EPG	 Guide / EPG / -/--
 Settings	 Setup / OPT /
 Up	 Up
 Input	 AV / Input / RDS

Original	Rechange
 Left	 Left
 OK	 OK
 Right	 Right
 List	 Smart / List
 Down	 Down
 Back	 Back / Return
 NETFLIX	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 Google Play	 Shift + Green / APP /
 Vol+	 Vol+
 Google Assistant	 Display / Media
 P+	 CH+ / Page+
 Vol-	 Vol-
 Home	 Menu / Home
 P-	 CH- / Page-
 Text	 Text / Goto





Original	Rechange	Original	Rechange
USB	SHIFT +  8 Shift + 8		
I/II	AUDIO Lang I/II		
Subt	SUBTITLE Subtitle / EQ		
Play / Text Mix	SLOW Play / Slow		
Pause	STEP-FREEZE Pause / Step / Freeze		
Stop / Text Hold	HOLD Stop / Hold		
Text Size	ZOOM Zoom / Size		
<< / Text	TUNE- << / Tune-		
I<< / Text Index	PRESET- I<< / Preset-		
>>I / Text Reveal	PRESET+ >>I / Preset+		
>> / Text Cancel	TUNE+ >> / Tune+		
Red	NETFLIX SEARCH Red / Netflix / Search		
Green	APP REPEAT Green / APP / Repeat		
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat		
Blue	Prime Video RANDOM Blue / Prime Video / Random		

