

 

 




Original	Rechange	Original	Rechange
 Power	 Power	 Recall	 Back
 Mute	 Mute	 <<	 <<
 ?/Help	 Smart	 Stop	 Stop
 [/]/Tv Format	 Format	 Play/Pause	 Play
 [^]/Tv/Radio	 TV/R	 >>	 >>
 */Mode	 D. Menu	 Rec	 Rec
 1	 1	 Exit	 Exit
 2	 2	 i/Info	 Info
 3	 3	 EPG	 Guide
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 OK/Enter	 Ok
 9	 9	 >>I/Next	 >>I
 0	 0	 I<</Prev	 I<<
 Menu	 Menu	 I>/Slow	 Pause

Original	Rechange	Original	Rechange
 Recall	 Back	 <<	 <<
 Stop	 Stop	 Play/Pause	 Play
 >>	 >>	 Rec	 Rec
 Exit	 Exit	 i/Info	 Info
 EPG	 Guide	 Up	 Up
 Down	 Down	 Right	 Right
 Left	 Left	 OK/Enter	 Ok
 >>I/Next	 >>I	 I<</Prev	 I<<
 I>/Slow	 Pause		





Original		Recharge		Original	Recharge
	■/File List		List		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Audio		Dual		
	Subtitle		Subt		
	Sleep		Sleep		
	Text		Text		
	FAV		Pre Ch		
	Status		AV		
	Find		3D		
	Option		Options		

