



 




 
 





 

 





Original	Recharge
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	P<P
0	0
--	--
	Menu [M]
	Info [i]
	I-II

Original	Recharge
	Mute
	Left
	Up
	Right
	OK
	Down
	V -
	V +
	P -
	P +
	Red / Sound
	Green / Picture
	Yellow / Feature
	Blue / Install
	Text





Original	Recharge	Original	Recharge
 [≡o]	 Sleep / Timer		
 Hold	 Stop / Hold		
 [≡X]	 Exit / Cancel / Clear		
 Mix / PIP Swap	 Smart / List		
 PIP / Size	 Zoom / Size		
 PIP Down / [≡?]	 I<< / Preset-		
 PIP Up / Index	 >>I / Preset+		
 [TV]	 TV/Radio /		
 [AV]	 AV / Input / RDS		

