
















 










 







 



 



 







 



















Original	Rechange	Original	Rechange
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Lang		Audio / Lang I/II
	[=].		Subtitle / EQ
	*1		Picture / Format
	Text		Text / Goto
	Google Play		Shift + Green / APP / APP / REPEAT
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	←		Back / Return
	V+		Vol+
	P+		CH+ / Page+
	V-		Vol-
	P-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7





	Original	Recharge		Original	Recharge
		8			
		9			
		[G]			
		0			
		Red			
		Green			
		Yellow			
		Blue			
		Home			
		Netflix			
		YouTube			
		prime video			

