



Original		Recharge		Original		Recharge	
	Power		Power		Vol+		Vol+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		Menu		Menu / Home
	2		2		Recall		Back / Return
	3		3		P+		Shift + CH+ /
	4		4		P-		Shift + CH- /
	5		5		Text		Text / Goto
	6		6		Exit		Exit / Cancel / Clear
	7		7		Fav		Fav / Marker / PC
	8		8		EPG		Guide / EPG / -/-
	9		9		Up		Up
	0 / Sleep		0		Left		Left
	0 / Sleep		Sleep / Timer		OK		OK
	TV/Rad		TV/Radio /		Right		Right
	TV / SAT		AV / Input / RDS		Down		Down
	CH+		CH+ / Page+		Red / V-FMT		Red / Netflix / Search
	CH-		CH- / Page-		Red / V-FMT		Picture / Format



