










 

 

 


 
 
 
 


 
 


 

 

 



 


 
 



 

 
 
 
 
 




 



 


 
 




 
 
 
 
 

 
 
 










Original	Rechange	Original	Rechange
 Power	 Power	 CH+	 Ch +
 Mute	 Mute	 CH-	 Ch -
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Right	 Right
 4	 4	 Left	 Left
 5	 5	 OK	 Ok
 6	 6	 Exit	 Exit
 7	 7	 Menu	 Menu
 8	 8	 Aspect	 Format
 9	 9	 Sleep	 Sleep
 0	 0	 Rec	 Rec
 PR.List	 List	 Red/DVD Setup	 Red
 Recall	 Pre Ch	 Green/Repeat	 Green
 Source	 AV	 Yellow/Languag	 Yellow
 Vol+	 Vol +	 Blue/DVD Menu	 Blue
 Vol-	 Vol -	 Title/PC Auto	 Media





Original	Rechange	Original	Rechange
 Tv/Radio	 TV/R	 PIC.Mode	 Shift + Format
 I-II/Audio	 Dual	 S.Mode	 Shift + Dual
 Subtitle	 Subt	 Zoom	 Shift + Eject
 Prog/Index	 Options		
 Step/Freeze	 Back		
 Text	 Text		
 Info/Display	 Info		
 Play/Size	 Play		
 Pause/Subpage	 Pause		
 Stop/Hold	 Stop		
 I<<	 I<<		
 >>I	 >>I		
 <<	 <<		
 >>	 >>		
 Rec List	 Guide		
 Open/Close	 Eject		
 A-B/Reveal	 D. Menu		

