

 
 





| Original | Rechange | Original | Rechange |
|---|---|--|--|
|  Power |  Power |  3 |  3 |
|  1 |  1 |  Enter |  Ok |
|  2 |  2 |  Start |  Up |
|  4 |  4 |  Left |  Left |
|  5 |  5 |  Right |  Right |
|  6 |  6 |  Backspace |  Down |
|  7 |  7 |  Cyc |  Menu |
|  8 |  8 |  Timer |  Shift + AV |
|  9 |  9 |  Red/Clock |  Red |
|  0 |  0 |  Green/Up |  Green |
|  * |  FAV PRE-CH |  Yellow/Down |  Yellow |
|  Mute |  MUTE |  Blue/Stopwatch |  Blue |
|  Reset |  CLEAR EXIT |  E1/112/24H |  Options |
|  Timer1 Down |  VOL - |  E2/°C/°F |  Dual |
|  Timer2 Down |  CH - |  E3/DD/MM |  Subt |
|  Timer2 Up |  + CH |  E4/Zone |  TV/R |
|  Timer1 Up |  + VOL |  F1/Auto |  Text |



