






















 






 



 







 



 

 

 
 





 














Original		Recharge		Original		Recharge	
	Power		Power		Vol+		Vol+
	Mute		Mute / Dimmer		CH-		CH- / Page-
	1		1		I-II		Audio / Lang I/II
	2		2		Vol-		Vol-
	3		3		Up		Up
	4		4		Left		Left
	5		5		OK/Select		OK
	6		6		Right		Right
	7		7		Menu		Menu / Home
	8		8		Down		Down
	9		9		TV/DTV		TV/Radio /
	AV/Source		AV / Input / RDS		Red		Red / Netflix / Search
	0		0		Green		Green / APP / Repeat
	Exit		Exit / Cancel / Clear		Yellow		Yellow / YouTube / Repeat
	-/--		-/--		Blue		Blue / Prime Video / Random
	CH+		CH+ / Page+		[≡]/Text		Text / Goto
	[i]/Info		Info / Angle		[≡o]		Sleep / Timer





	Original	Recharge	Original	Recharge
	[≡+]/[X]	 << / Tune-		
	[≡x]/[··]	 >> / Tune+		
	[.]/[*]	 I<< / Preset-		
	[≡◆]/[+]/Wide	 Picture / Format		
	[≡?]	 >>I / Preset+		
	[≡i]/Guide	 Guide / EPG / -/--		
	P<P/SWAP	 Fav / Marker / PC		
	PP	 Back / Return		

