



Original	Rechange	Original	Rechange
<<	<< / Tune-	8	8
>>	>> / Tune+	9	9
I<<	I<< / Preset-	[=?]/Source	Eject / Surround
>>I	>>I / Preset+	0	0
Play	Play / Slow	O)/I/II/Audio	Audio / Lang I/II
Pause	Pause / Step / Freeze	Menu	Menu / Home
Stop	Stop / Hold	Exit	Exit / Cancel / Clear
Power	Power	Up	Up
[=i]/Info	Info / Angle	Left	Left
Mute	Mute / Dimmer	Enter	OK
1	1	Right	Right
2	2	Down	Down
3	3	CH+	CH+ / Page+
4	4	Index	Display / Media
5	5	Vol+	Vol+
6	6	CH-	CH- / Page-
7	7	List	Smart / List





Original		Recharge		Original	Recharge
	Vol-		Vol-		
	♥		Fav / Marker / PC		
	Sleep		Sleep / Timer		
	EPG		Guide / EPG / -/--		
	Recall		Back / Return		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	[≡]		Text / Goto		
	[≡+]/Still		Zoom / Size		
	Radio		TV/Radio /		
	[≡◆]/[++]		Picture / Format		
	[≡x]		Setup / OPT /		
	[≡o]/Subtitle		Subtitle / EQ		
	DMP		D.Menu / Top		
	Rec		Rec / Rec Mode		

