


































 




































	Original	Rechange		Original	Rechange
	 Power	 Power		 0	 0
	 Mute	 Mute / Dimmer		 -/--	 Guide / EPG / -/--
	 FAV / Eject	 Fav / Marker / PC		 Recall	 Back / Return
	 FAV / Eject	 Eject / Surround		 Setup	 Setup / OPT /
	 P.Mode	 Picture / Format		 Exit	 Exit / Cancel / Clear
	 S.Mode	 Sound / Title		 Call	 Smart / List
	 Sleep	 Sleep / Timer		 Source	 AV / Input / RDS
	 Scaler	 Menu / Home		 Up	 Up
	 1	 1		 Left	 Left
	 2	 2		 OK	 OK
	 3	 3		 Right	 Right
	 4	 4		 Down	 Down
	 5	 5		 CH-	 CH- / Page-
	 6	 6		 CH+	 CH+ / Page+
	 7	 7		 Vol-	 Vol-
	 8	 8		 Vol+	 Vol+
	 9	 9		 Text / Play	 Text / Goto





Original	Rechange
Text / Play	Play / Slow
Mix / Pause/Play	Pause / Step / Freeze
Index / Stop	Stop / Hold
I/II	Shift + Audio / Lang I/II
Cancel / <<	Shift + Exit / Cancel / Clear
Cancel / <<	<< / Tune-
Reveal / >>	>> / Tune+
Hold / I<<	I<< / Preset-
Hold / I<<	Shift + Stop /
Size / >>I	>>I / Preset+
Size / >>I	Zoom / Size
Red / Goto	Red / Netflix / Search
Red / Goto	Shift + Text /
Green / A-B	Green / APP / Repeat
Green / A-B	Shift + Yellow / YouTube /
Yellow / Repeat	Yellow / YouTube / Repeat
Yellow / Repeat	Shift + Green / APP / Repeat

Original	Rechange
Blue / Angle	Blue / Prime Video / Random
Blue / Angle	Info / Angle
S.Page /	D.Menu / Top
Page- / Title	Shift + Sound / Title
Page- / Title	Shift + CH- /
Page+ / PBC	Shift + CH+ /
Audio	Audio / Lang I/II
i / Display	Display / Media
Radio / Zoom-	TV/Radio /
Radio / Zoom-	Shift + Down
EPG / Zoom+	Shift + Up
EPG / Zoom+	Shift + Guide / EPG / -/-
S.Title / Subtitle	Subtitle / EQ

