



 




 
 





 

 







Original	Rechange
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	P<P
0	0
	Menu / Home
	Info / Angle
	Audio / Lang I/II

Original	Rechange
	Mute / Dimmer
	Left
	Up
	Right
	OK
	Down
	Vol-
	Vol+
	CH- / Page-
	CH+ / Page+
	Red / Netflix / Search
	Sound / Title
	Green / APP / Repeat
	Picture / Format
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Text / Goto





Original	Rechange	Original	Rechange
 [≡o]	 Sleep / Timer		
 Hold	 Stop / Hold		
 [≡X]	 Exit / Cancel / Clear		
 Mix / PIP Swap	 Smart / List		
 PIP / Size	 Zoom / Size		
 PIP Down / [≡?]	 << / Preset-		
 PIP Up / Index	 >> / Preset+		
 [TV]	 TV/Radio /		
 [AV]	 AV / Input / RDS		

Original	Rechange

