


Original		Recharge		Original		Recharge	
	Power		Power		•→ CM Skip		Shift + Right
	Home		Smart		Audio		Dual
	Home		Menu		Search		TV/R
	TV system		List		Repeat		Text
	Source		AV		Subtitle		Subt
	EPG		Guide		AB_Repeat		Shift + Text
	Display		Info		Slow		Shift + Play
	Video In		Blue		Pause / Step		Pause
	Copy		Red		Play		Play
	Browser		Yellow		Zoom		Eject
	Setup		Options		PREV		I<<
	Setup		Green		NEXT		>>I
	Timer REC		Shift + AV		FRWD		<<
	Rec		Rec		FFWD		>>
	Edit		3D		TimeShift		Format
	Select		Media		Return		Back
	←• INS_Replay		Shift + Left		Stop		Stop

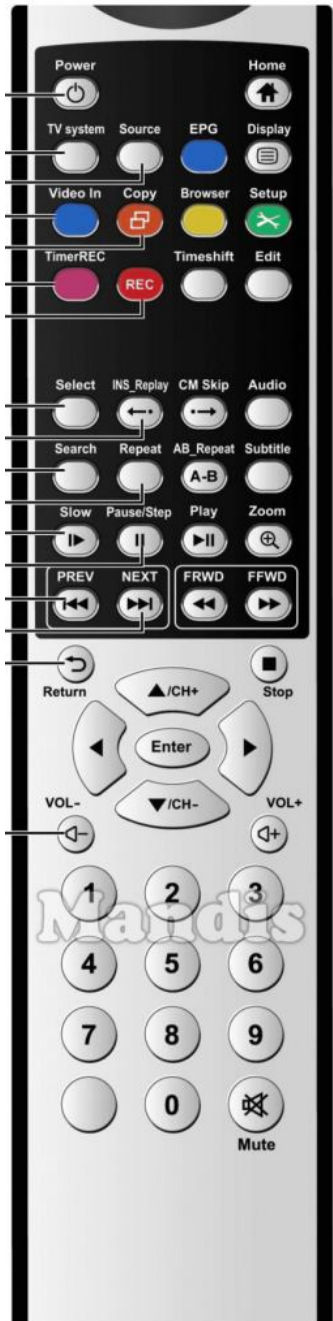



Original	Recharge
Up / CH+	Up
Up / CH+	Ch +
Down / CH-	Down
Down / CH-	Ch -
Left	Left
Enter	Ok
Right	Right
Vol+	Vol +
Vol-	Vol -
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Recharge
9	9
0	0
Mute	Mute

