



| Original | | Rechange | | Original | | Rechange | |
|---|----------|---|--------------|---|-------|---|----------------|
|  | Power |  | Power |  | 8 |  | 8 |
|  | Mute |  | Mute |  | 9 |  | 9 |
|  | Audio |  | Dual |  | 0 |  | 0 |
|  | TV / STB |  | Shift + TV/R |  | PGUP |  | Vol + |
|  | TV / R |  | TV/R |  | PGDN |  | Vol - |
|  | Sleep |  | Sleep |  | SAT |  | Shift + AV |
|  | SUB |  | Subt |  | FAV + |  | Ch + |
|  | TXT |  | Text |  | FAV - |  | Ch - |
|  | P / N |  | Shift + 1 |  | EPG |  | Guide |
|  | Recall |  | Pre Ch |  | Fav |  | Shift + Pre Ch |
|  | 1 |  | 1 |  | Up |  | Up |
|  | 2 |  | 2 |  | Right |  | Right |
|  | 3 |  | 3 |  | Down |  | Down |
|  | 4 |  | 4 |  | Left |  | Left |
|  | 5 |  | 5 |  | OK |  | Ok |
|  | 6 |  | 6 |  | Menu |  | Menu |
|  | 7 |  | 7 |  | Exit |  | Exit |





| Original | | Recharge | | Original | | Recharge | |
|---|----------|---|-----------|---|--------------|---|---------------|
|  | Red |  | Red |  | << |  | << |
|  | Green |  | Green |  | >> |  | >> |
|  | Yellow |  | Yellow |  | Play / Pause |  | Play |
|  | Blue |  | Blue |  | > < |  | Shift + Pause |
|  | Pause |  | Pause |  | << |  | << |
|  | Zoom |  | Eject |  | >> |  | >> |
|  | Edit |  | Format | | | | |
|  | Info |  | Info | | | | |
|  | USB |  | AV | | | | |
|  | MP3 |  | Media | | | | |
|  | JPEG |  | Smart | | | | |
|  | PVR List |  | List | | | | |
|  | A - B |  | Back | | | | |
|  | T.S. |  | Shift + 2 | | | | |
|  | Goto |  | Options | | | | |
|  | Stop |  | Stop | | | | |
|  | Rec |  | Rec | | | | |

