







Original	Rechange
Power	Power
1	1
2	2
3	3
TV/SAT	Smart / List
4	4
5	5
6	6
Radio	TV/Radio /
7	7
8	8
9	9
Mute	Mute / Dimmer
0	0
Red / i	Info / Angle
Red / i	Red / Netflix / Search
Green / Audio	Green / APP / Repeat

Original	Rechange
Green / Audio	Audio / Lang I/II
Yellow / Subtitle	Yellow / YouTube / Repeat
Yellow / Subtitle	Subtitle / EQ
Menu	Menu / Home
Blue / UHF	Blue / Prime Video / Random
Up	Up
White / Timer	Sleep / Timer
White / Timer	Fav / Marker / PC
Left	Left
OK	OK
Right	Right
Exit	Exit / Cancel / Clear
Down	Down
V+	Vol+
P+	CH+ / Page+
V-	Vol-
?	D.Menu / Top





	Original	Rechange		Original	Rechange
	EPG	 Guide / EPG / -/--			
	RCL	 CH- / Page-	 Display / Media		

