








 







 







 



 

 





 



Original	Rechange
 Power	 Power
 AV	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / 10	 0
 - / - / + 10	 GUIDE Guide
 Recall	 PRE-CH Pre Ch
 Reveal	 FORMAT Format
 Size	 Eject
 Mix	 Shift + Text

Original	Rechange
 Cancel	 Exit
 Timer	 Shift + AV
 Index	 Info
 Text	 Text
 Sleep	 Sleep
 Status	 Smart
 Mute	 Mute
 Red / OK	 Red
 Red / OK	 Ok
 Green / P.P	 Green
 Yellow / ANA	 Yellow
 Blue	 Blue
 Up / P+	 Up
 Up / P+	 Ch +
 Down / P-	 Down
 Down / P-	 Ch -
 Left / V-	 Left





Original	Rechange	Original	Rechange
 Power	 Power	 Down	 Down
 Eject	 Eject	 Setup	 Options
 1	 1	 Enter	 Ok
 2	 2	 Return	 Back
 3	 3	 Slow	 Shift + Play
 7	 7	 Step	 Shift + Pause
 8	 8	 Sub-T	 Subt
 9	 9	 Clear	 Exit
 0/10	 0	 Chann	 Media
 -/-- / +10	 GUIDE	 A-Time	 Text
 Angle	 Format	 I<<	 I<<
 Zoom	 Shift + Eject	 I>>	 I>>
 Program	 Sleep	 Play	 Play
 Memory	 Pre Ch	 Pause	 Pause
 Up	 Up	 <<	 <<
 Left	 Left	 >>	 >>
 Right	 Right	 Stop	 Stop

