



Original	Rechange	Original	Rechange
Power	Power	Shift + Guide / EPG / -/--	Shift + Guide / EPG / -/--
Mute	Mute / Dimmer	Jump	Smart / List
Source	AV / Input / RDS	Menu	Menu / Home
P.Mode	Picture / Format	Info	Info / Angle
S.Mode	Sound / Title	Sleep	Sleep / Timer
I/II/Audio	Audio / Lang I/II	Exit	Exit / Cancel / Clear
P.Size	Zoom / Size	Up	Up
1	1	Left	Left
2	2	Enter	OK
3	3	Right	Right
4	4	Down	Down
5	5	Vol+	Vol+
6	6	Vol-	Vol-
7	7	P-	CH- / Page-
8	8	P+	CH+ / Page+
9	9	Red/D.Setup	Red / Netflix / Search
0	0	Red/D.Setup	Setup / OPT /



