



 




 




 







 



 
 




	Original	Recharge
	Power	 Power
	Mute	 Mute
	Balance L	 Left
	Balance R	 Right
	2.1 CH	 Smart
	5.1 CH	 Media
	M.Vol +	 Vol +
	M.Vol -	 Vol -
	SUB +	 Ch +
	SUB -	 Ch -
	CEN +	 Up
	CEN -	 Down
	SUR +	 >>I
	SUR -	 I<<<

Original	Recharge

