













 



 

 







 



 



 




| Original  | Recharge  |
|---|---|
|  Power   |  Power                       |
|  Red     |  Red / Netflix / Search      |
|  Green   |  Green / APP / Repeat        |
|  Yellow  |  Yellow / YouTube / Repeat   |
|  Blue    |  Blue / Prime Video / Random |
|  Menu    |  Menu / Home                 |
|  P<P     |  Smart / List                |
|  Up      |  Up                          |
|  Left    |  Left                        |
|  Ok      |  OK                          |
|  Right |  Right                     |
|  Down  |  Down                      |
|  AV    |  AV / Input / RDS          |
|  Tv/R  |  TV/Radio /                |
|  Info  |  Info / Angle              |
|  I-II  |  Audio / Lang I/II         |
|  Vol+  |  Vol+                      |

| Original   | Recharge  |
|--|---|
|  P+     |  CH+ / Page+                 |
|  Vol-   |  Vol-                        |
|  Mute   |  Mute / Dimmer               |
|  P-     |  CH- / Page-                 |
|  1      |  1                           |
|  2      |  2                           |
|  3      |  3                           |
|  4      |  4                           |
|  5      |  5                           |
|  6      |  6                           |
|  7      |  7                           |
|  8     |  8                          |
|  9    |  9                         |
|  PP   |  Back / Return             |
|  0    |  0                         |
|  Exit |  Exit / Cancel / Clear     |
|  Exit |  Shift + Guide / EPG / -/- |





| Original  | Recharge   |
|---|--|
|  [=]/Text      |  GOTO<br>TEXT Text / Goto           |
|  [=o]          |  TUNE- << / Tune-                   |
|  [=+]          |  TUNE+ >> / Tune+                   |
|  [=x]          |  PRESET- l<< / Preset-              |
|  [=] [= *]     |  PRESET+ >>l / Preset+              |
|  [=◇]/[+]/Wide |  FORMAT<br>PICTURE Picture / Format |
|  [=?]/PC       |  PC<br>FAV MARKER Fav / Marker / PC |
|  [=i]/Guide    |  GUIDE<br>EPG Guide / EPG / -/--    |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |
|   |  |

| Original | Recharge |
|----------|----------|
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |

