



 



 
 
 

 

 
 


 

 
 


 



 
 


 



 

 

 

 

 
 
 

 

 

 

 

 

 
 


 


 






Original		Rechange		Original		Rechange	
	Power		Power		Vol+		VOL +
	PRO/TV/TXT		TEXT		Vol-		VOL -
	Slow/Cancel		INFO		CH+		CH +
	Rep/Reveal		TV/R		CH-		CH -
	TV/AV		SRC		OK		OK
	1		1		Up		UP
	2		2		Down		DOWN
	3		3		Right		RIGHT
	4		4		Left		LEFT
	5		5		Menu		MENU
	6		6		Exit		EXIT
	7		7		Mute		MUTE
	8		8		Sleep	 Shift + Power	
	9		9		Subtitle		Subt.
	0		0		LAN/EPG		-/-- / EPG
	Recall		BACK		D.Menu/List		MEDIA
	FAV		P/C / FAV		Stop		Stop





Original		Rechange		Original	Rechange
	Open/Close/Recor		Rec		
	Set/CH/List		VOD		
	Sound		Audio		
	Picture		V-FOR		
	Pause		Pause		
	Play		Play		
	Display		WIDE		
	Nicam/A2		OPT+		
	<</Hold		Rewind		
	>>/Size		Fast Forward		
	<</Subpage		First		
	>> /Index		Last		
	Red/Zoom		Red (A)		
	Green/Goto		Green (B)		
	Yellow/Title		Yellow (C)		
	Blue/Angle/Screen		Blue (D)		

