

 







 



























 

 









 



 
 
 

 













Original	Rechange	Original	Rechange
 Power	 Power	 Zoom	 Zoom / Size
 Mute	 Mute / Dimmer	 I<<	 I<< / Preset-
 HDTV	 AV / Input / RDS	 Up/Timeshift	 Up
 Movie	 Smart / List	 >>I	 >>I / Preset+
 Music	 Sound / Title	 Left/<<</Jump	 Left
 Photo	 Display / Media	 OK	 OK
 1	 1	 Play	 Play / Slow
 2	 2	 Pause	 Pause / Step / Freeze
 3	 3	 Right/>>>/Sort	 Right
 4	 4	 Vol+	 Vol+
 5	 5	 Down	 Down
 6	 6	 Tv CH+	 CH+ / Page+
 7	 7	 Vol-	 Vol-
 8	 8	 Stop	 Stop / Hold
 9	 9	 Return	 Back / Return
 16:9/4:3	 Picture / Format	 Tv CH-	 CH- / Page-
 0	 0	 Info	 Info / Angle





Original	Rechange
[ABC]/Subtitle	EQ Subtitle / EQ
Favorite	Fav / Marker / PC
→/Goto	Text / Goto
* /Setup	Setup / OPT /
♪/Audio	Audio / Lang I/II
Repeat	Green / APP / Repeat
X/Shuffle	D.Menu / Top
Tv Out	TV/Radio /
Title/Yellow	Yellow / YouTube / Repeat
Menu	Menu / Home
Function/Blue	Blue / Prime Video / Random
Guide	Guide / EPG / -/--
Bookmark/Schedule/Rec List	Red / Netflix / Search
Add/Delete	Exit / Cancel / Clear
Rec	Rec / Rec Mode

Original	Rechange

