

 

 




 







| Original     | Recharge                    |
|--------------|-----------------------------|
| Power        | Power                       |
| Mute         | Mute / Dimmer               |
| Red/Sub.     | Red / Netflix / Search      |
| Green/TTX    | Green / APP / Repeat        |
| Yellow/Audio | Yellow / YouTube / Repeat   |
| Blue         | Blue / Prime Video / Random |
| EPG          | Guide / EPG / -/--          |
| Info         | Info / Angle                |
| Tv/Radio     | TV/Radio /                  |
| Rec          | Rec / Rec Mode              |
| DTV          | Smart / List                |
| Video        | Shift + 4                   |
| Music        | Audio / Lang I/II           |
| Picture      | Picture / Format            |
| APP          | Shift + Green / APP /       |
| Setting      | Setup / OPT /               |
| Web          | Display / Media             |

| Original | Recharge              |
|----------|-----------------------|
| Goto     | Text / Goto           |
| Home     | Shift + Menu /        |
| Up       | Up                    |
| Menu     | Menu / Home           |
| Left     | Left                  |
| OK       | OK                    |
| Right    | Right                 |
| Back     | Back / Return         |
| Down     | Down                  |
| Del      | Exit / Cancel / Clear |
| >>       | >>  / Preset+         |
| Vol+     | Vol+                  |
| >>       | >> / Tune+            |
| <<       | << / Preset-          |
| Vol-     | Vol-                  |
| <<       | << / Tune-            |
| 1        | 1                     |





| Original  |       | Recharge  |                       | Original |  | Recharge |  |
|---|-------|---|-----------------------|----------|--|----------|--|
|    | 2     |    | 2                     |          |  |          |  |
|    | 3     |    | 3                     |          |  |          |  |
|    | 4     |    | 4                     |          |  |          |  |
|    | 5     |    | 5                     |          |  |          |  |
|    | 6     |    | 6                     |          |  |          |  |
|    | 7     |    | 7                     |          |  |          |  |
|    | 8     |    | 8                     |          |  |          |  |
|    | 9     |    | 9                     |          |  |          |  |
|    | Play  |    | Play / Slow           |          |  |          |  |
|    | Pause |    | Pause / Step / Freeze |          |  |          |  |
|  | 0     |  | 0                     |          |  |          |  |
|  | Stop  |  | Stop / Hold           |          |  |          |  |
|   |       |   |                       |          |  |          |  |
|   |       |   |                       |          |  |          |  |
|   |       |   |                       |          |  |          |  |
|   |       |   |                       |          |  |          |  |
|   |       |   |                       |          |  |          |  |
|   |       |   |                       |          |  |          |  |
|   |       |   |                       |          |  |          |  |
|   |       |   |                       |          |  |          |  |
|   |       |   |                       |          |  |          |  |
|   |       |   |                       |          |  |          |  |

